

Quick start guide



PHILIPS



Be responsible
Respect copyrights

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V.
or their respective owners
2006 © Koninklijke Philips Electronics N.V. All rights reserved.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing only unless otherwise authorised by Macrovision. Reverse engineering or disassembly is prohibited.




Printed in Taiwan

wk6354


What's in the box



CD-ROM containing Windows Media Player 10, Arcsoft MediaConverter, User Manual, Tutorials and Frequently Asked Questions

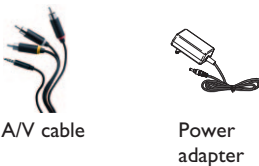

Quick start guide

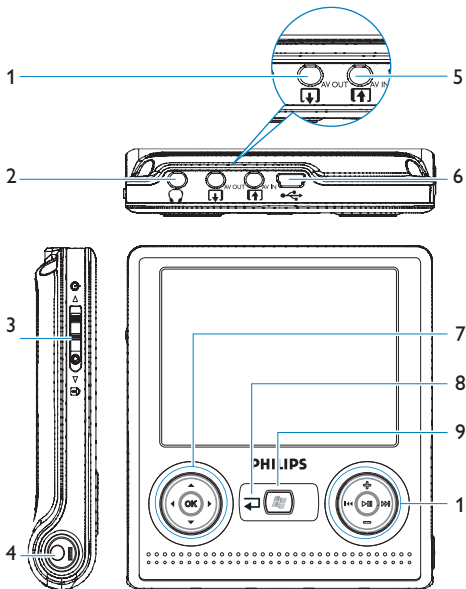

Overview of control and selection

1 AV Out	6 USB port
2 Headphone jack	7 Menu navigation / OK
3 On/Off/Lock slider (key lock)	8 Menu back control
4 Charging socket	9 Main menu
5 AV In	10 Playback and volume control

1 Install


Before you connect your player to your PC you need to install the software.



- 1 Insert the CD supplied with your product into the CD ROM drive of your PC.
- 2 Follow the onscreen instructions to complete the installation of **Windows Media Player** and **Arcsoft MediaConverter**.
- 3 If the installation program does not start automatically, browse the CD contents via **Windows Explorer** and run the program by double clicking on the file ending with .exe.

2 Connect

A Record video

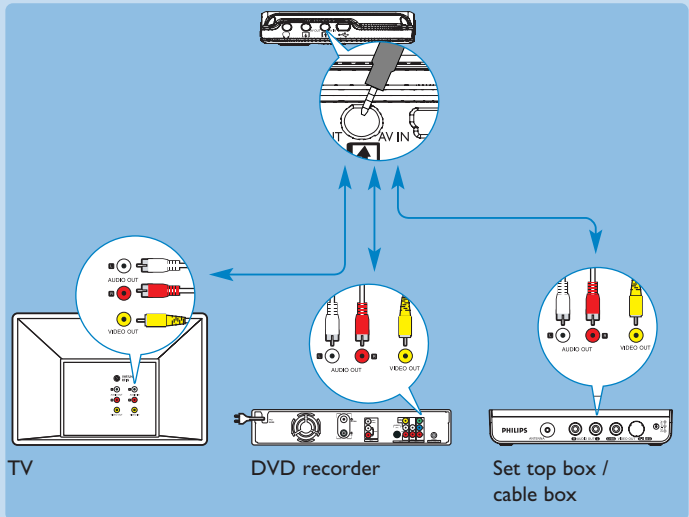


Your player can record your favorite TV programs.

- 1 Connect the A/V cable to the Video-in jack of your player.
 - 2 Connect the other end, with the yellow, white and red plugs to the matching colored A/V output jacks on your TV, cable box, satellite tuner or DVD recorder.
 - 3 Turn on your video source and select the channel or program that you would like to record.
 - 4 On your player, from the main menu, select **Recording**.
 - 5 On your player, select **Video** and press **OK**.
- > The player will search for the video signal. Once detected, it will display the same video signal on your player.
- 6 Press **OK** to start recording.
 - 7 Press **OK** again to stop recording.
- > The recording will be saved under **my videos**.

You can also schedule recordings using the **Timer Recording** function. Consult the user manual on the CD for detailed instructions.


B Playback on TV

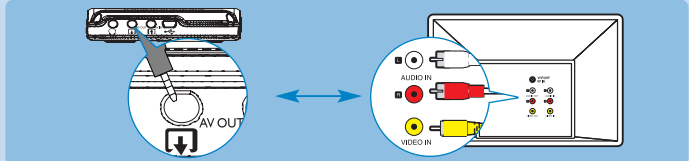

You can play music, videos, and view pictures on your TV.

- 1 Connect the player to your TV as shown.
 - 2 On your player, press **OK** to enter the main menu and select settings.
 - 3 Select **Display** from the **settings** menu.
 - 4 Select **TV-out**.
 - 5 Select **On** and press **OK**.
- > A message will appear: **To return display to the Portable Media center, turn power off and then on.**
- 6 On your TV , select the AV channel. (Check your TV user guide for details on selecting AV input.)
- > You should see the menu of your player on your TV screen.

C Connect to PC

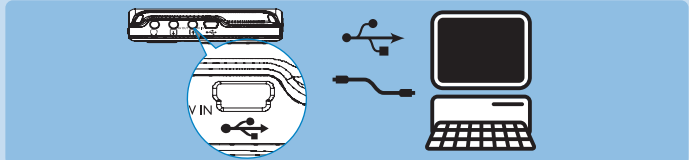


You can connect you player to PC.

- 1 Turn on the player.
 - 2 Connect the player to PC as shown.
- > The screen of the player indicate the connection with PC.

3 Transfer

A Transfer video


- 1 Connect your player to the PC using the supplied USB cable.
- 2 Start **ArcSoft MediaConverter**.

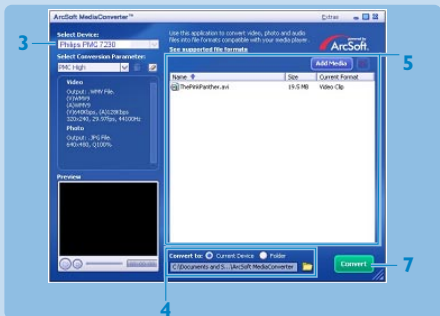

- 3 Once your player is connected , it will show up as **Philips PMC7230** in the box as shown.
- 4 In the Convert to: option at the bottom of the screen, select **Current Device**, the content will be stored directly on the connected player.
- 5 Press **Add Media** to select the Video files to be transferred
OR
Drag and drop your video files from **Windows Explorer** into the while box shown.
- 7 Press **Convert**.

If needed, the files will first be converted to a format that player can playback. The conversion takes time and please be patient.


> All the converted files will be transferred to the player.

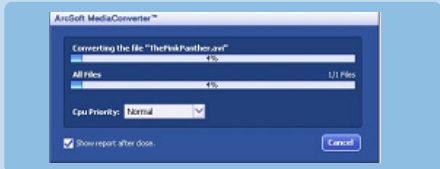

- 8 The Progress of conversion and transfer is shown

> The files will be stored in the **Videos** under **Main Menu** -> **my videos** folder of the player. You can see the result of the conversion (if needed) and transfer by checking **My Computer** > **Philips PMC7230** > **Media** > **Video** when the player is attached to the PC.

B Transfer music and pictures

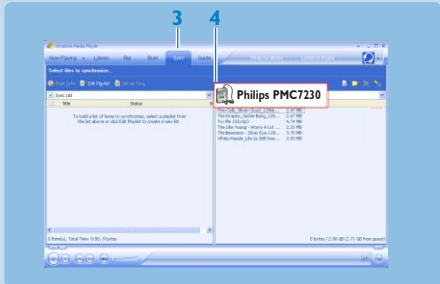

- 1 Start **Windows Media Player**.
- 2 Connect the player to your computer using the supplied USB cable.
- 3 Select **Sync** tab to confirm that your player is connected.
- 4 In the pull-down menu on the right pane, select **Philips PMC7230** as the destination.


If the player is not in the list, click **F5** to refresh and try again.

- 6 Select the **Library** tab to access the media library.
- 7 Click to highlight the song or picture you want to copy.
- 8 Right click on the song and select **Add to > Sync List**.
OR
Drag and drop the song into the **Sync List** on the right pane.
- 9 Click **Start Sync** button at the bottom of the screen to start synchronization.

> The progress will be displayed just above the **Start Sync** button.

4 Enjoy


Main menu

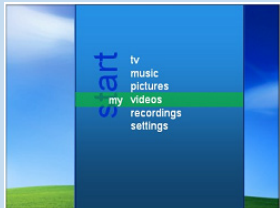

Select menu item	To
my TV	View recorded TV programs (only those programs recorded on a Media Center PC)
my music	Playback your music
my pictures	View your pictures
my videos	View your videos and recorded TV programs
recording	Start a video or audio recording Schedule a video recording
settings	Customize the settings of your player

Troubleshooting

How do I reset my player?

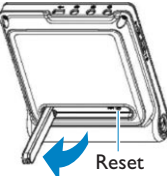

Insert a small pin or a sharp object into the reset hole located at the back of the player under the desk stand. Hold until the player restarts.

Please refer to the user manual for more troubleshooting advice.

Need help?

User Manual

See the user manual that came with your receiver.
Online

Go to www.p4c.philips.com